

innoXplore iX-S70 Bluetooth Low Energy Pedometer

1. Type in “BLE Pedo” in Apple App Store, and search for below App to install on your iPhone4S/5, iPad 4/3/Mini.



2. Open the App, entering main UI.




3. Turn device Power On, press Pairing button to enter Pairing mode, Red and Green LED flashing indicating Pairing mode.

4. Click “Activate” on App, iPhone will automatically pair and connect to the device, LED off. App goes to the Main UI.



5. Go to Setting UI, you can reset data, control music on/off, set personal Physical data, set Target data, switch System of Unites (US or SI)

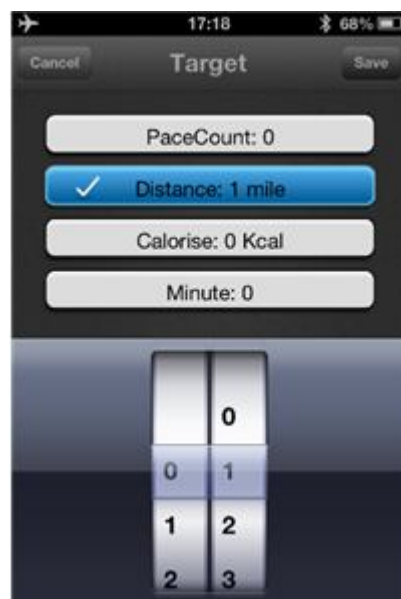




6. Go back to Main UI, click **START** to enable device to work, UI would change to show real-time running data.

After **START** clicked, screen will be locked, **STOP** and **RESET** buttons not functional. Click the unlock icon to unlock and you can press **STOP** or **RESET** button.



7. Go to History UI, weekly data would be shown in chart.

You can press “setting time” to see your recorded former running data.

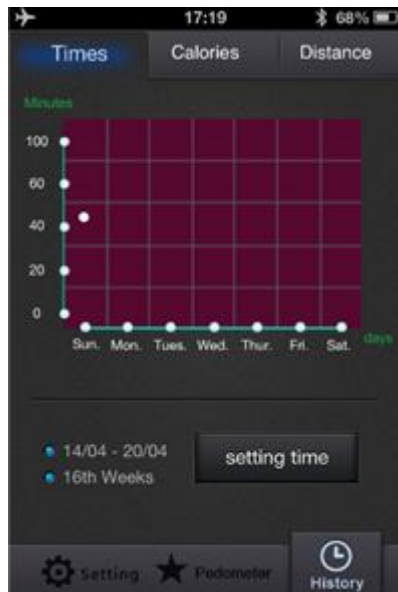

8. To enter Offline record, press Pairing button, Red LED will on for 4 seconds and off indicating Off line record mode activated. App change to Activate Main UI.
9. After running finished, open the App, press Pairing button to enter Pairing mode, click “Activate” to reconnect, stored data will be updated.(Changes can be seen in Today’s Total Steps)